

INSTALLATION INSTRUCTIONS:

Quick Release pendant fixtures are compatible with Odyssey Line Voltage Flexible Track, Line Voltage Track and mono-point ceiling canopies. Available in four different lengths of coaxial wire: 2', 4', 6', and 8'.

Select the appropriate fixture adapter (track or ceiling canopy) for your lighting needs. Slide glass shade over pendant assembly until seated properly on the socket. Using included Hex keys, make sure the three set screws on the Quick Disconnect Plug are secure and tight. Insert Quick Disconnect Plug from pendant fixture into the adapter and twist ring to tighten (Figure 1).

SHORTENING PENDANT CABLE LENGTH:

1. Determine desired exposed cord length (e.g. 48")
2. Add 2" to desired exposed wire length and mark cord (e.g. 50")
3. Cut cord at mark.
4. Remove Quick Disconnect Plug from excess remaining cord by removing 1.5mm hex key set screw (A) and the 3mm hex key set screw (Figure 2). Do not remove 1.5mm set screw (B). The Quick Disconnect Plug may now be separated from the cord.
5. Strip 1-3/8" of insulation only from cord leaving the braided wire in place.
6. Remove only 1" of braided wire, leaving behind 3/8" of the braided wire exposed.
7. Strip the inner stranded wire 1/8".
8. Fold back the braided wire over the coaxial wire jacket, place stripped wire end into the Quick Disconnect Plug. **Push the wire all the way in until the stripped inner stranded wire is visible through the 1.5mm screw hole opening (A)** in the tip of the plug and the cord jacket is visible in the 3mm screw hole, rotate the wire so that the braid is visible.
9. **NOTE: The cord braid and jacket under it must be visible in the 3mm screw hole to ensure a properly secured pendant.** With wire in place, fasten 3mm hex key set screw until tight and cord is secure.
10. **Confirm stripped inner stranded wire is still visible in opening (A)** and then fasten 1.5mm hex key set screw in opening in plug tip.
11. Make sure ALL set screws are secure and tight.
12. Install shade onto pendant assembly (see Shade Assembly above). Insert Quick Disconnect Plug from pendant fixture into the adapter and twist ribbed ring to tighten (Figure 1).

SHADE ASSEMBLY:


Gravity-Fit pendants capture the shade by holding the glass from below on a ledge. The shade slides over the cable and sits on the ledge. Seat glass on the pendant fixture before attaching to the fixture adapter.

IMPORTANT SAFETY INSTRUCTIONS:

- Read all the instructions before installation. Save instructions for later use.
- Turn off power at fuse or circuit breaker box before installation of before doing any maintenance work.
- Product must be mounted in locations and at heights in a manner consistent with its intended use, and in compliance with National Electrical Code and local building codes. For indoor use only.
- Product must be grounded to avoid potential electric shock and any other potential hazards.
- Do not exceed the nominal supply voltage or amperage ratings.
- Make sure all screws are properly tightened.
- Installing contrary to instructions may cause unsafe conditions.
- **Warning:** Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C. Consult a qualified electrician before installation.
- To avoid hazards to children, account for all parts and properly dispose of all packing materials.
- Call the Technical Support department at ConTech Lighting with any installation questions: 847-559-5500.

All specifications subject to change without notice. For ConTech's limited product warranty, go to www.contechlighting.com. For a printed copy of the warranty, call 1-847-559-5500.

1

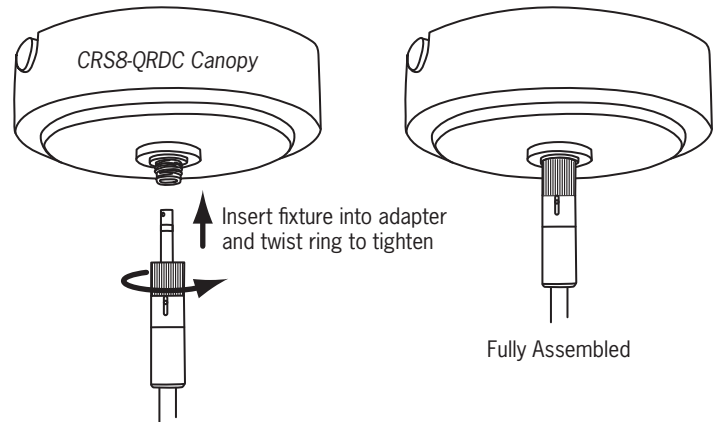

2

